

COTTON CANDY INSTRUCTIONS

**** IMPORTANT ****

Plug machine directly into an outlet. If you **must** use an extension cord, use only #10 wire cord as short as possible.

OPERATION

1. Press motor switch to “ON” position
2. Fill the spinner head with the desired amount of sugar floss.
Never fill past the bottom level of the filler spout.
3. Press the HEAT switch to the “ON” position.
4. Turn HEAT CONTROL knob to heat setting #9.
5. Once floss starts to flow out of head, reduce the HEAT CONTROL to the minimum setting that maintains the flow of floss.
(Too high of a setting will cause floss to clog the head screen)
6. When the amount of floss that is produced starts to slow, add more sugar.
DO NOT adjust the HEAT CONTROL!

NOTE: The typical setting on the HEAT CONTROL is a range between 4 and 6. This will vary due to fluctuations in external conditions.

SHUTTING DOWN

1. Turn the HEAT CONTROL knob to the “OFF” setting.
(Past the 9 setting and you will hear a click)
2. Press the HEAT switch to the “OFF” position.
3. Wait several minutes for the spinner head to cool down.
4. Press MOTOR switch to “OFF” position.

In case of a malfunction, immediately shut off MOTOR and HEAT switches and correct the problem!

CLEANING

1. Unplug machine and remove bubble from the base.
2. Brush off any loose sugar from the base.
3. **DO NOT** use water to wash or rinse the electrical base!
4. Rinse bubble with warm water.



80 Passaic Ave
Chatham, NJ 07928
973-635-7870
www.pionerrentalsinc.com