

POPCORN MACHINE INSTRUCTIONS

**** IMPORTANT ****

Be sure equipment is connected to properly grounded 120 volt power supply with 15 amp circuit. Plug machine directly into an outlet. If you **must** use an extension cord, use only #10 wire cord as short as possible.

OPERATION

1. Turn on the two switches (KETTLE and LIGHT) inside top left of cabinet.
2. Allow kettle to warm for approximately 5 minutes.
3. **PORTION PACKS:** Cut off top of plastic pack. Dump entire contents in kettle. Pull lid closed to prevent stray kernels.
4. While corn is popping, keep front operator doors slightly ajar to prevent fogging. Keep hopper door at "out" position to aid in catching stray popcorn.
5. Allow corn to pop until popping ceases, usually when 3-4 seconds lapse between pops. Then pour remaining popped corn from kettle by rotating handle clockwise 1/3 turn and pulling downward.
6. Repeat steps 1-5 for additional batches.
7. Turn KETTLE switch to OFF position when finished preparing popcorn; POWER or LIGHT switch may remain ON to display and heat popcorn.

KETTLE WILL BE HOT! Please be sure to avoid direct contact with the kettle during the popping process! Keep kettle switch in "**OFF**" position when not popping

CLEANING INSTRUCTIONS

1. When machine has cooled, empty un-popped kernels and wipe down inside of machine with a dry cloth. DO NOT use water on the electrical kettle!



80 Passaic Ave
Chatham, NJ 07928
973-635-7870
www.pionerrentalsinc.com